

i3SIXTY 2 INSTALLATION MANUAL WH1370

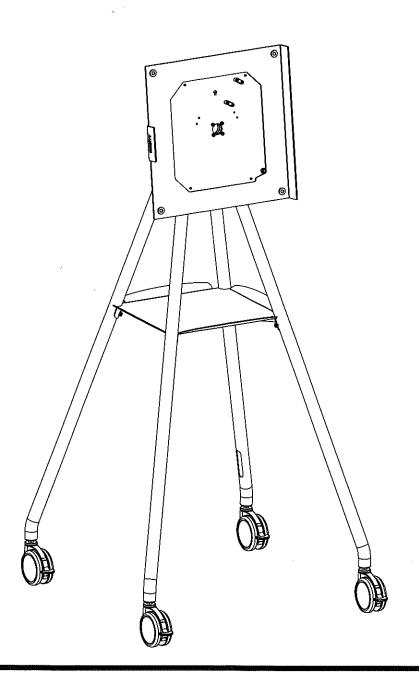


Warnings:


- Please read the manual carefully before installation.
- This manual is intended for i3SIXTY 2 touch display only (VESA 400x400)
- Maximum load: 35kg

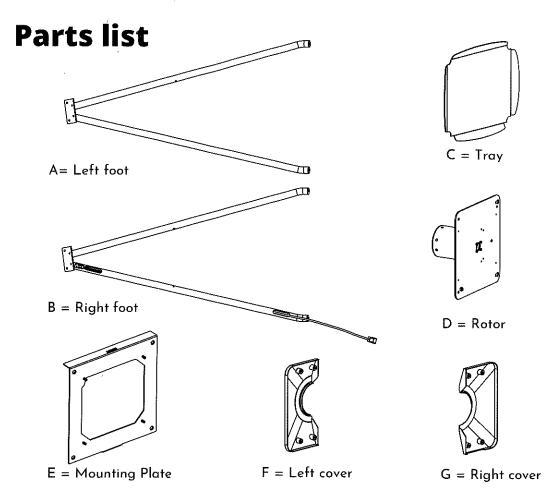



Content of the screw package				
1	Cross recessed hex head screw	M6x15	4pcs	
2	Cross recessed hex head screw	M8x20	8pcs	- B
3	Cross countersunk head screw	M8x25	4pcs	
4	Anti-skid nut	M8	4pcs	®
5	Cross head screw	M5x8	8pcs	
6	Cross round head screw	M4x12	4pcs	
7	Washer	17x10.5x2	4pcs	0
8	Spring washer	18x10.5x1.5	4pcs	0
9	Wheel	=	4pcs	Ø
10	Washer	18x8.5x1.5	4pcs	0
11	Cable clamp	_	2pcs	
12	Spacer	18x8.5x20	lpc	0
13	Open wrench, small	13mm	lpc	2
14	Open wrench, large	17mm	1pc	2
15	Hex key	SW5	lpc	
x	Bring your own PHILLIPS screwdriver	PH2	●	

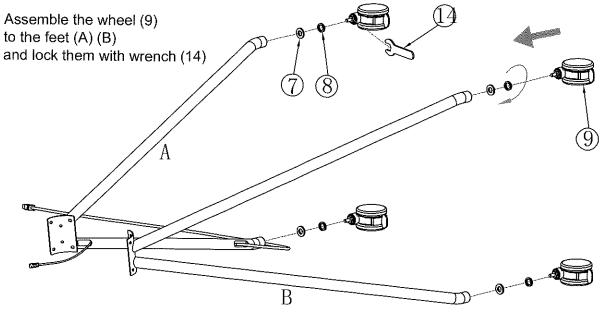


STEP 2

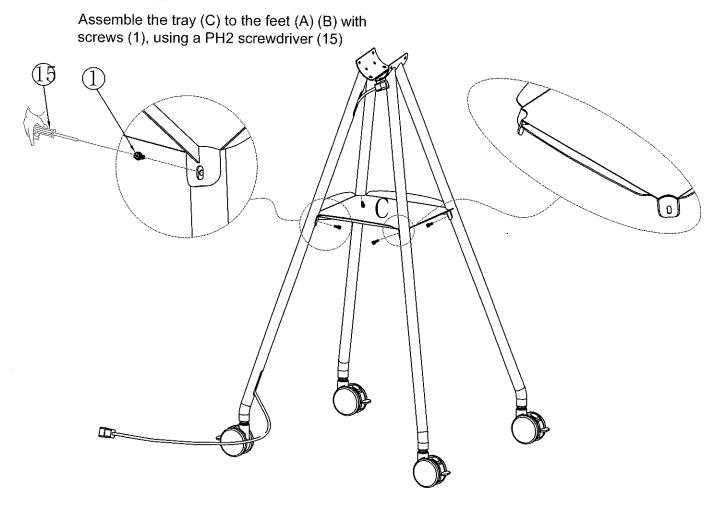

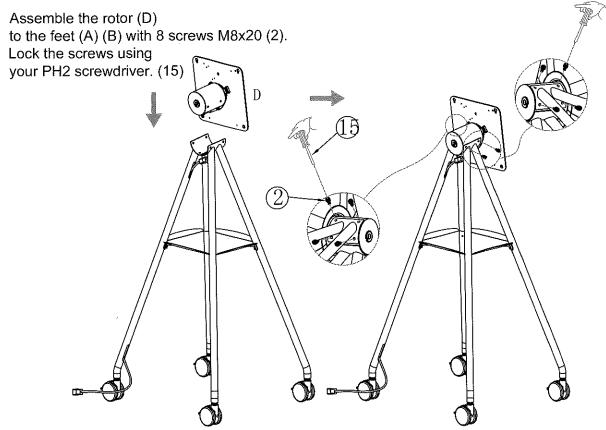

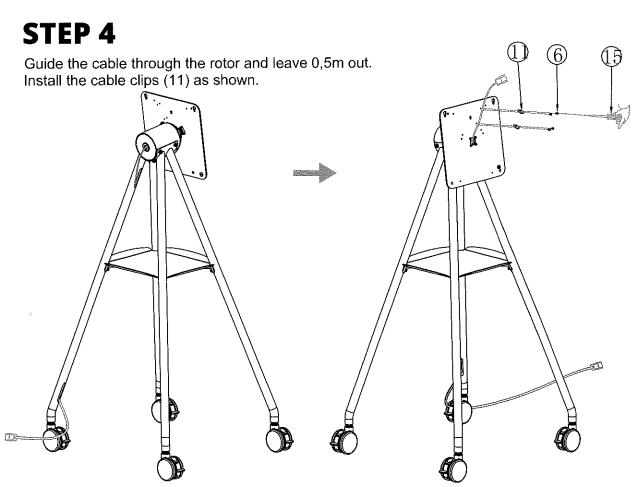


Connect the mounting plate (E) to the i3SIXTY 2 display. It only fits in one way. Put the spacer (12) in between to keep the correct distance. Use 4 SCREWS (3) and fix them with the Hox Koy (14)

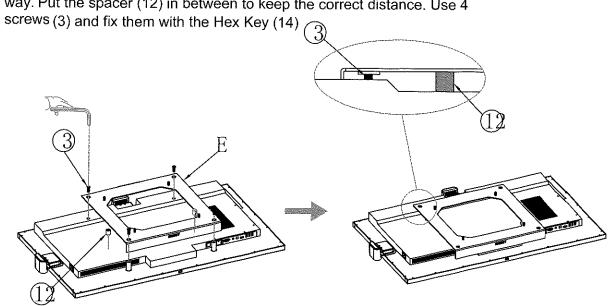


STEP 6

Guide the power cable through the central hole of the mounting plate. Install the display to the frame, using 4 spring washers (10) and 4 nuts (4) and tighten with the M8 wrench (13)

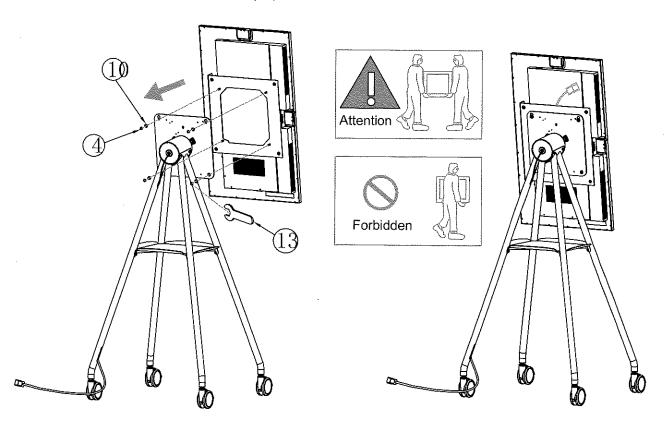


Remove the spacer (12) and tighten all 4 screws (3) that hold the display. Use the Hex Key (14)

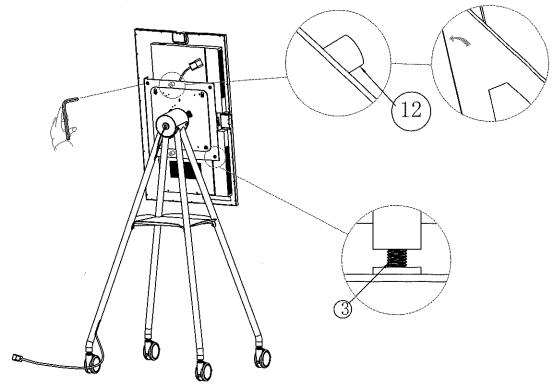


STEP 8


Check the vertical and horizontal position of the display. If correct, proceed to step '10'.

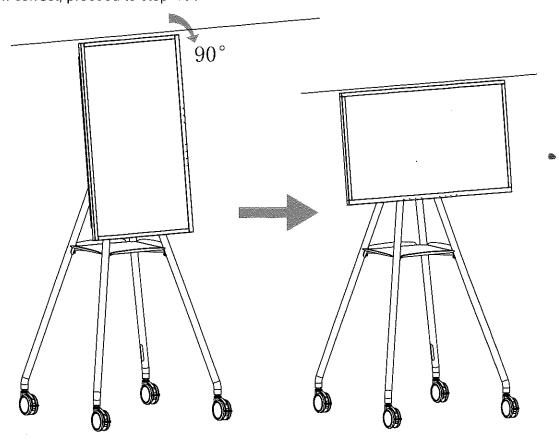

ONLY IF THE DISPLAY IS NOT IN A CORRECT HORIZONTAL OR VERTICAL POSITION: Loosen the two screws of the endstop. Hold the display in the correct position. Push the endstop to its end and tighten the screws firmly.

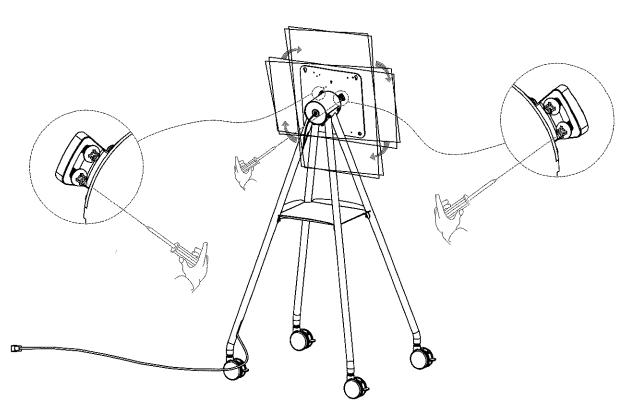

STEP 10
Install the left and right rear covers (F,G) on the rotor (D).
Use 8 screws M5x8 (5) and your PH2 screwdriver.

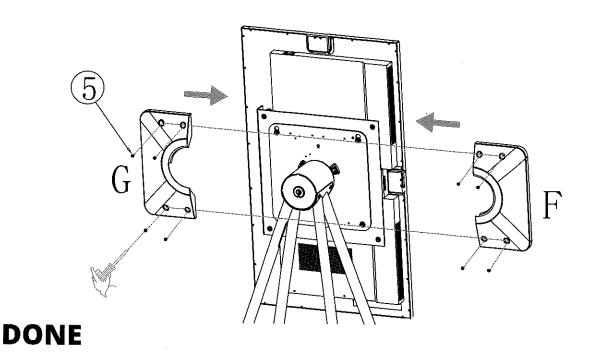

i3SIXTY 2

To find more information on the i3SIXTY 2, visit the website:



ANY QUESTIONS OR TROUBLE INSTALLING?

First contact your dealer that you have bought the product from. or contact us on https://www.i3-technologies.com/en/support/

i3-TECHNOLOGIES NV Logistics and Service Center: Nijverheidslaan 60 B8540 DEERLIJK Belgium